




- **WARNING!** Risk of fire or electric shock. Reflector kit installation requires knowledge of fluorescent lighting systems and electrical systems. Install this kit only in the luminaires that has the construction features and dimensions shown in the photographs and/or drawings.
- **WARNING!** Fixture wiring, ballast or other electrical parts may be damaged when drilling for installation of reflector kit hardware. Check enclosed wiring and components prior to installation.
- **WARNING!** To prevent wiring damage or abrasion, do not expose wiring to any edges or sheet metal or any sharp edges.
- **WARNING!** Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- **WARNING!** Only those open holes indicated in the photographs and/or drawings may be made or altered as a result of kit installation. Do not leave any open holes in an enclosure of wiring or electrical components.
- **WARNING!** Do not alter, relocate or remove wiring, lampholders, ballast or any other electrical component.

Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. INSTALLATION OF THIS RETROFIT ASSEMBLY REQUIRES A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF FLUORESCENT LUMINAIRE ELECTRICAL SYSTEMS AND THE HAZARD INVOLVED. Use only the hardware included in retrofit kit (see contents below)

### CONTENTS:

- a) One reflector
  - b) Four tek screws
  - c) Two brackets
  - d) One ballast
  - e) Four sockets
  - f) One quick disconnect
- Pre-wired

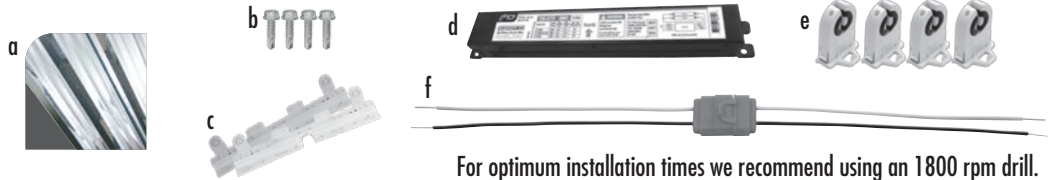

For optimum installation times we recommend using an 1800 rpm drill.

### DIRECTIONS:

1. Disconnect power
2. Remove lamps, ballast cover & brackets  
*(lamp holders need to be taken out of the existing brackets, wires may need to be removed from lampholders and then replaced)*
3. Put lamp holders into new lamp brackets and center lamp brackets on each end of the fixture
4. Screw lamp brackets into end cap using self tapping tek screws through the holes in the top of the bracket. The lampholders should be pressed up against the end cap.
5. Insert reflector into the tabs on the new lamp brackets. For ease of installation squeeze the center peak of the reflector and snap into lamp bracket tabs.
6. Remove plastic film from reflector  
*(white reflectors do not have film)*

